

Assembly Instructions




Dear Customer,

Thank you for choosing a quality product from SQLab GmbH. With your selection of the new **602 active** saddle you have made an excellent choice. Your new saddle has been manufactured according to the very latest anatomic and ergonomic findings in a state-of-the-art manufacturing process.

Please read the following assembly instructions thoroughly and adjust the saddle on your bicycle as described below so that you can enjoy the full range of functions during your cycling tours.


Four damper sticks are included in delivery with every **600 active** saddle.

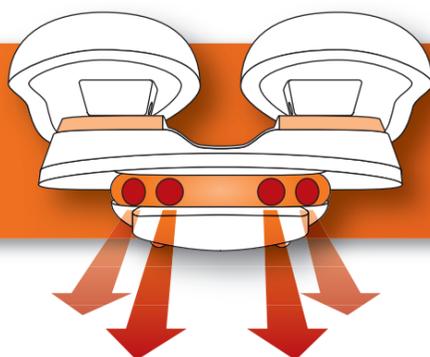

For softer and more comfortable saddle movement, pull two or four sticks out of the damper as shown below.


Less sticks makes the damper softer, and sideways movement is increased.

We recommend riding with the sticks if your bodyweight is 80 kg* or more. After a break in period the saddle becomes softer.

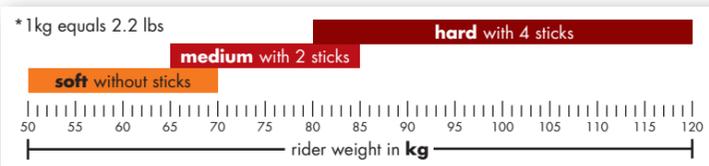



The number of sticks you use depends on your personal preference for seating position and body weight.

Keep the extra sticks in case you need them for more damping at a later date.

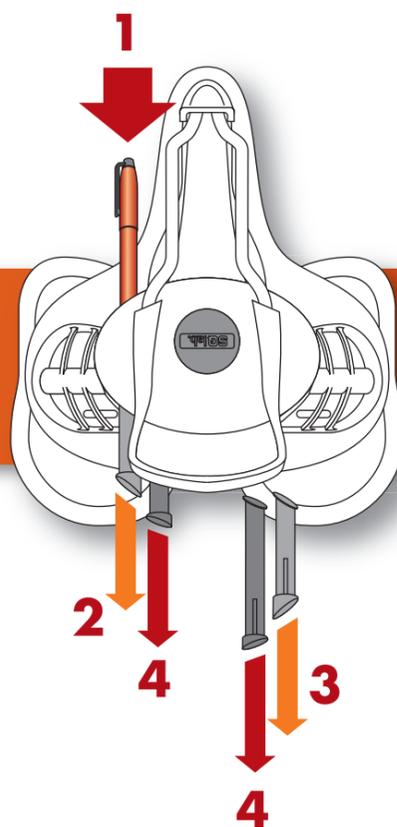

- 1 Push the first outside stick with the round side of a marker or hex key so it sticks a little bit out of the damper.
- 2 Pull the stick out by hand.
- 3 Push the second stick and pull it out.
- 4 Same with the inner sticks.

Adjustability in three widths:

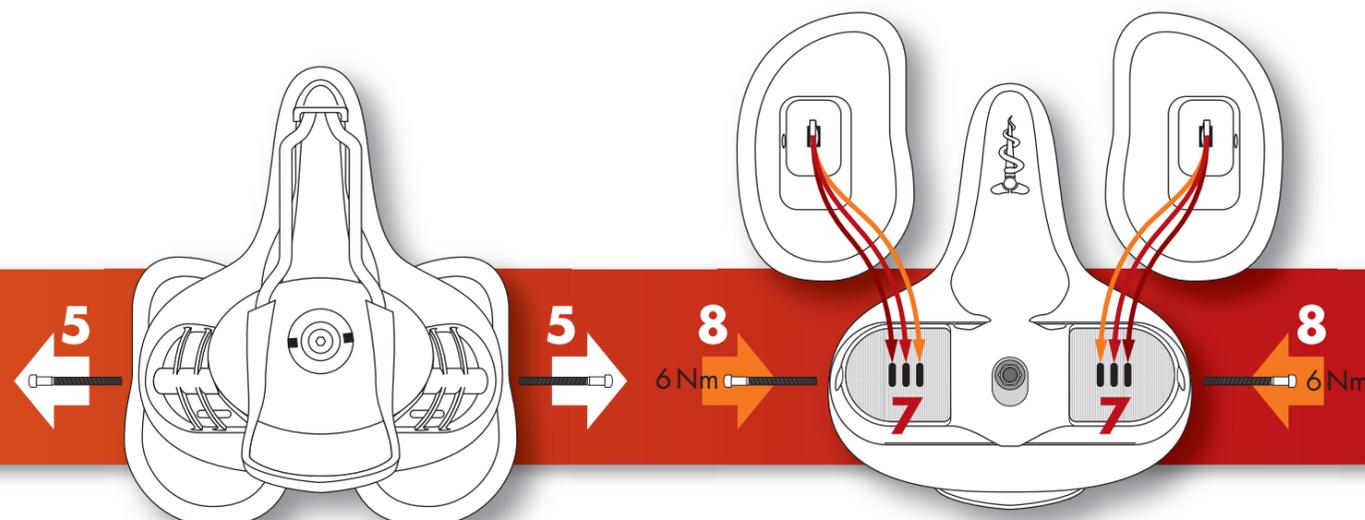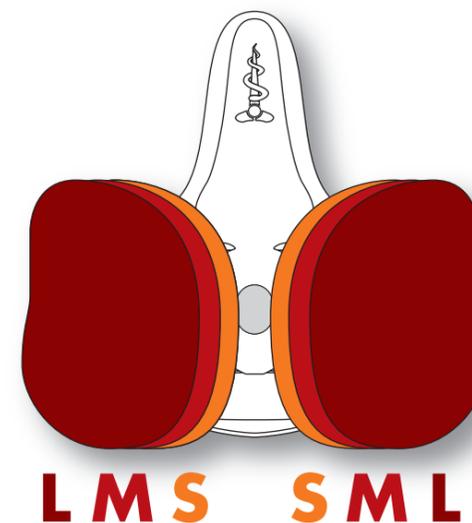

5 Loosen the 3 mm hex screw and remove completely.

6 Remove the seat pads.

7 Place the seat pad tabs in the slot for the required width.

8 Replace the 3 mm hex screw and tighten.

Use only water to clean the saddle! Many chemical cleaners are very aggressive and can damage the cover and foam.

Assembly · Adjustment · Warranty

Assembly:

Make sure there are no sharp edges at the clamping area of the saddle support. The clamping area must be at least 35 mm. Pay attention to the torque recommended by the manufacturer.

Adjustment:

The 600 active sits much higher compared to conventional saddles. Adjust the saddle height after mounting the saddle. Usually, the seat post must be lowered. First fit the saddle in the middle of the clamping area. The saddle nose should be horizontal or positioned slightly upward. Find more information at: www.sqlab.com

Warranty:

SQLab offers a two-year warranty on manufacturing and defective material.